


100mm Speedometer - Rover (SD1) Sensor

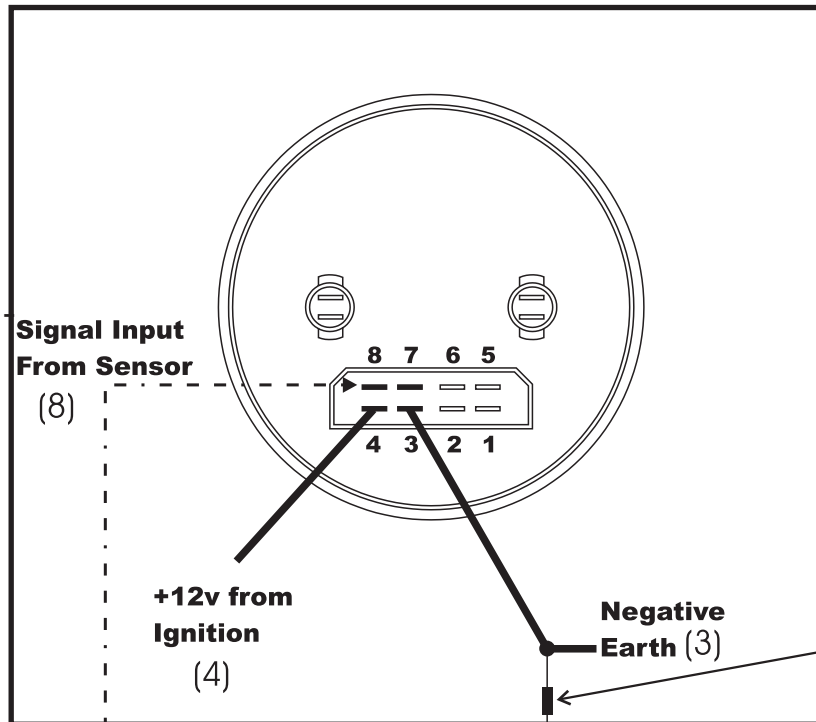

Notes on Installation

1. Always disconnect the battery prior to installation.
2. Ensure that the negative wire is connected to a suitable earth.
3. Connect the positive 12 volt terminal to the ignition switch "on" terminal so that 12 volts is only supplied when the engine is running.

N.B. THIS ONLY APPLIES TO VEHICLES WITH A NEGATIVE GROUND - I.E. THE NEGATIVE SIDE OF THE BATTERY IS CONNECTED TO THE CHASSIS OR ENGINE BLOCK.

Connect Resistor between earth and signal input. Start with 1K5 Ohm resistor supplied. If Speedometer Operation is Intermittent, replace 1K5 with 1K Ohm resistor also supplied.

1k5 Ohms 1k Ohms

Negative Earth Only

