


52mm Mechanical Turbo Boost Gauge

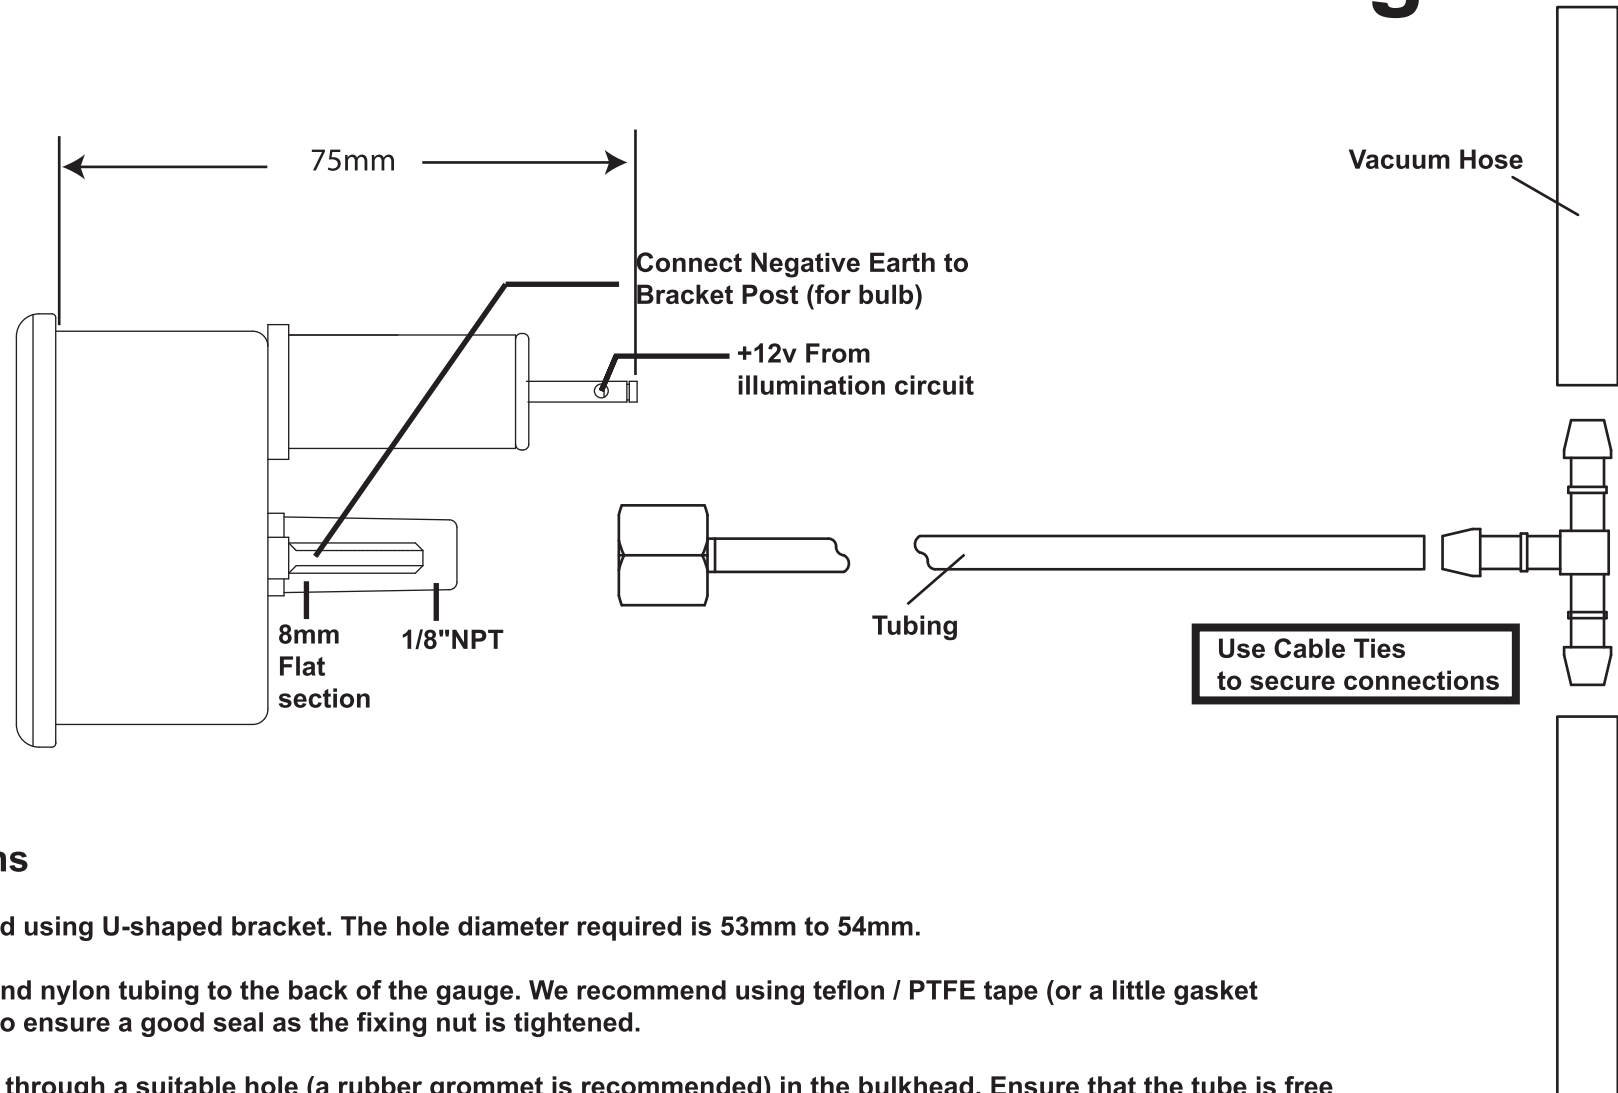

Fitting Instructions

1. Fit gauge to dashboard using U-shaped bracket. The hole diameter required is 53mm to 54mm.
2. Attach the brass nut and nylon tubing to the back of the gauge. We recommend using teflon / PTFE tape (or a little gasket sealant) on the threads to ensure a good seal as the fixing nut is tightened.
3. Feed the nylon tubing through a suitable hole (a rubber grommet is recommended) in the bulkhead. Ensure that the tube is free from the hazard of moving parts or hot engine components.
4. Connect the nylon tubing to the manifold vacuum hose using the T-piece supplied and secure with cable ties.
5. Start engine and thoroughly check the installation for leaks.
6. Connect a +12v feed from the dash lighting circuit to the illumination bulb and a negative earth connection via to one of the gauge bracket posts.